

http://www.boosterplug.com/shop/cms-downloads.html

## **Installation Tips**

- Install the BoosterPlug module as per the general installation papers.
- The pictures below should help you locate the AIT sensor where the BoosterPlug is installed.
- The AIT sensor is located under the head light
- The External sensor on the BoosterPlug is already in the right spot, so you just need to secure it next to the AIT sensor with a zip-tie to prevent it from flopping around.

## Pictures



